## Dominant Duct Leakage

<u>Channel A:</u> Open to inside WRT outside. Record + or – Pascal reading.

- Dominant with air handler on
- "+" Reading indicates a Return leakage,
- "-" Reading indicates a Supply leakage.

DG	DG-700 Pressure				
	MODE		TIME A	VG	
	DEVICE	UNITS	CONFIG Cruise Target		
	MODE	CLEAR Stop Fan	TIME AVG		
	LINE	START Start Fan	ENTER Begin Cruise	+	
	ON/	ЦСНТ	HOLD	↑ B	
reen Hose		NERGY		↓ Ref	
o Outside		CE	BULDING PERFORMAN	° +	

